


## INSTALLATION INSTRUCTIONS

### MOBILITY WHEELS (for UK only)

Depending on model, your washing machine is provided with mobility wheels.


You will find these wheels in the accessory kit supplied with the machine, or you can order them from our After-Sales Service.

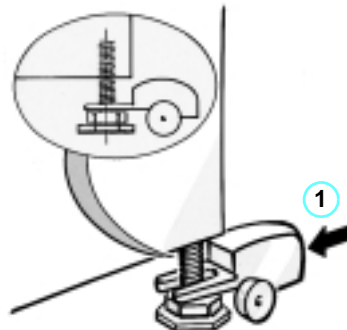

### MOUNTING INSTRUCTIONS


1. Tilt the machine forward.
2. Loosen the two rear feet.
3. Insert the wheels as close as possible to the screw (1).
4. Tighten the screw completely (2).
5. Put the machine in an upright position.
6. Adjust the front feet making sure that the machine is completely level with the floor.

**Note:** Levelling is extremely important to avoid any risk of instability and vibrations.

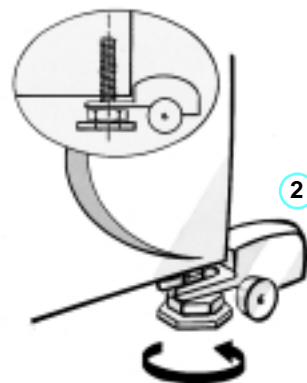

### MOVING THE MACHINE

1. Open the door of the machine.
2. Lift the machine by 1 or 2 cm (3).
3. Push or pull the machine according to your need.

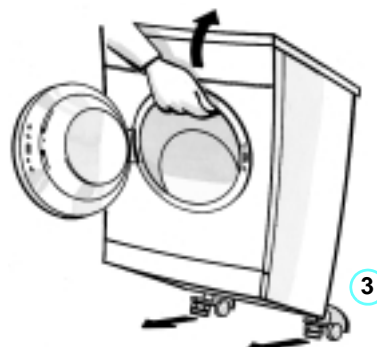

## INSTALLATION INSTRUCTIONS

### 1) ELECTRICAL CONNECTIONS

#### **“Warning - this appliance must be earthed”**

This appliance is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity.

If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below.

Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket.

### 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician

The wires in the mains lead are coloured in accordance with the following code:

**BLUE - “NEUTRAL” (“N”)**


**BROWN - “LIVE” (“L”)**

**GREEN AND YELLOW - “EARTH” (“E”)**

To fit a new plug, proceed as follows:

#### **2.1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A)**

- c. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter “E” or by the Earth symbol  $\oplus$  or coloured yellow or green and yellow.
- d. The BLUE wire must be connected to the terminal which is marked with the letter “N” or coloured black.
- e. The BROWN wire must be connected to the terminal which is marked with the letter “L” or coloured red.

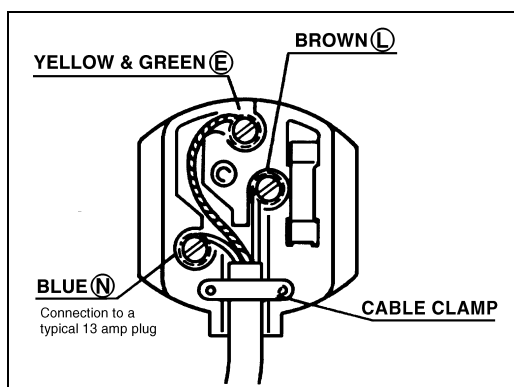


#### **2.2 Non-polarized plugs (e.g. 2 pin with side earth contact)**

The wire which is coloured GREEN AND YELLOW must be connected to the earth contact. The other two wires should be connected to the two pins, irrespective of colour.

### 3) FUSE REPLACEMENT

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.S.T.A. approved type conforming to BS 1362 and proceed as follows:

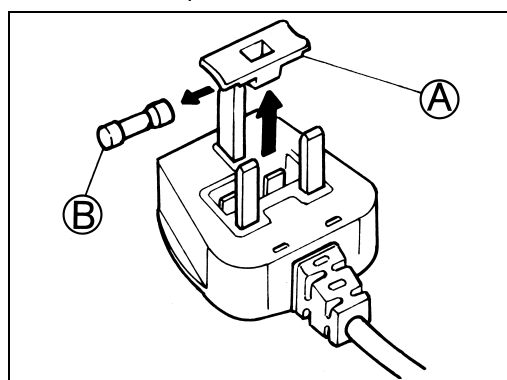

1. Remove the fuse cover (A) and the fuse (B).
2. Fit the replacement 13 A fuse into the fuse cover.
3. Refit both into the plug.

For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board.

## INSTALLATION INSTRUCTIONS

### DRAIN HOSE

- Drain hose connection to water outlet.
1. Unhook the drain hose from the left clip, (see arrow A Fig. 1.)  
**Do not loosen the drain hose connection, see arrow B in Fig. 1, otherwise there is the risk of leakage (danger of scalding with hot water).**
  2. Fix the "U" bend supplied (inside the drum) to the free end of the drain hose.
  3. Fit the drain hose either to the siphon or hook it over the edge of a sink or bath tub with the "U" bend (Fig. 2).  
 Small hand basins are not suitable.
  4. Minimum drain height: 70 cm  
 Maximum drain height: 125 cm
  5. If you need to add an extension, use a flexible hose of the same type and secure the union with screw-on hose clips.  
 Maximum overall drain hose length: 2.50 m.

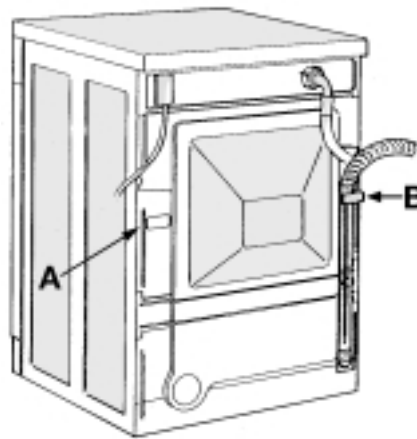


Fig. 1

### Important:

Make sure there are no kinks in the drain hose run and take precautions against it falling while the appliance is running.

### CONNECTION TO THE MAINS

- Observe local utility company regulations.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The system must be earthed. The manufacturer declines all responsibility for injury to persons or pets and damage to property caused by disregarding the above instructions.
- The data concerning voltage, consumption and necessary fuse are supplied on the inside of the appliance door.
- The mains connection cable may only be replaced by a qualified electrician.
- **The appliance conforms to European safety regulations, EC directive EC directive 93/68/EEG and EN 60555.**
- Do not use extension leads or multisockets.

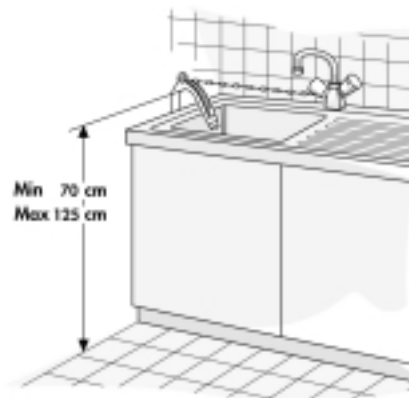


Fig. 2

## INSTALLATION INSTRUCTIONS

### **WATER SUPPLY**

- Water supply: only cold water.
- Tap: 3/4" threaded hose connector.
- Water pressure (mains pressure): 10-100 N/cm<sup>2</sup> (1-10 bar).

### **INLET HOSE(S)**

1. Insert the mesh filter supplied in the thread on the end of the inlet hose(s) and the tap(s).
2. Carefully screw the inlet hose(s) to the tap(s) preferably by hand, taking care that the hose is not kinked.
3. Turn the tap(s) on fully and check that the joints at the washing machine and the tap(s) are watertight.
  - If the hose is not long enough, replace it with a suitable length of pressure-resistant hose (approved under EN 500 65 to withstand a minimum of 10 bar).
  - Check the hose regularly for brittleness and cracks and replace if necessary.
  - The washing machine may be connected without a non-return valve.
  - Observe any special local regulations regarding connection to the water supply.


### **WATER STOP (depending on model)**

- The inlet hose and the plastic enclosure at the water connection contain electrical components.
- Do not cut the flexible hose and do not immerse the plastic enclosure in water.
- If the hose is damaged, unplug the appliance from the mains immediately.
- If the hose is not long enough, replace it with a 3 m long Water Stop hose (available from After-Sales Service or a specialist dealer). This must be done only by a qualified electrician.

## INSTALLATION INSTRUCTIONS

### INSTALLATION

- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
  - Make sure that all four feet are resting firmly on the floor, and check that the appliance is perfectly level (use a spirit level).
  - If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood, cardboard etc. under the feet).
1. Slacken the locknut with the spanner supplied.
  2. Adjust the height of the foot, turning it by hand.
  3. Tighten the locknut anticlockwise towards the washing machine.
- If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.

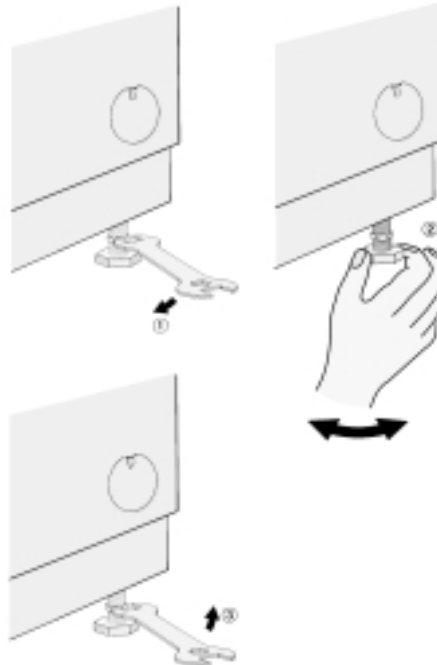


### BUILT UNDER/ WORKTOP

**The appliance must be installed only under a fitted continuous kitchen worktop.**

**The appliance must only be built under using the built under set UBS.**

- Unplug the appliance from the mains.
1. Unscrew the worktop fixing screws from the rear of the appliance.
  2. Slide the worktop fully backward and lift it upwards to remove.  
Install the cover panel following the relative instructions.
  3. Refit the fixing screws and tighten them.

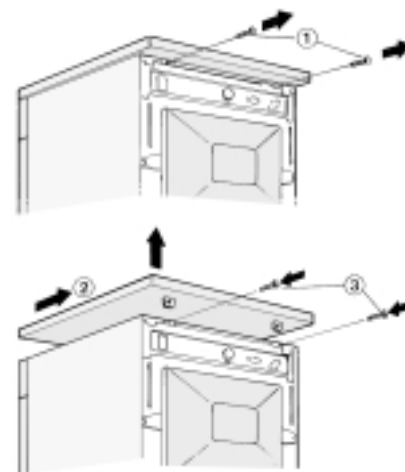

### BUILD-UNDER OPENING DIMENSIONS

Width	600 mm
Height	825 mm
Depth	600 mm

### WARNING:

Only plug the machine into the mains power socket after you have fitted the cover panel or the machine worktop.

## INSTALLATION INSTRUCTIONS

### TRANSIT BOLTS

The appliance is fitted with transit bolts to prevent internal damage while it is being moved.

**Before using the appliance the transit bolts MUST be removed (Fig. 1).**

1. Slacken the bolts with the spanner supplied (Fig. 2).
2. Unscrew the bolts by hand.
3. Hold each bolt head and pull the bolts complete with red plastic spacer through the wide part of the holes.
4. Close the holes with the provided plastic caps. Fit the caps in the direction indicated by the arrow in the large opening and slide them into the narrow slot until they sit properly (Fig. 3).
5. Keep the transit bolts for future use.

#### Note:

Fit the transit bolts before transporting the appliance as follows: pry up the plastic caps with a screwdriver, slide them out against the direction indicated with the arrow and remove them. Fit the transit bolts by following the above procedure in reverse order.

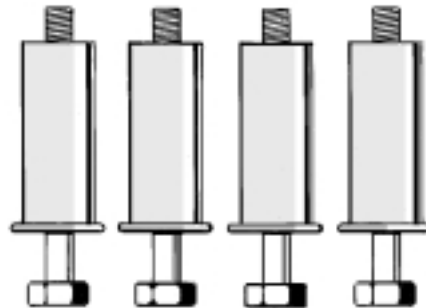


Fig. 1

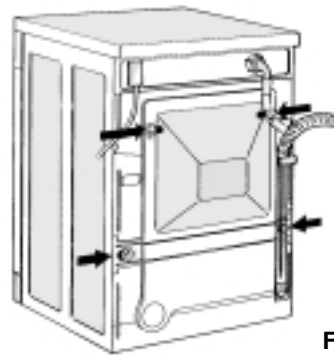


Fig. 2

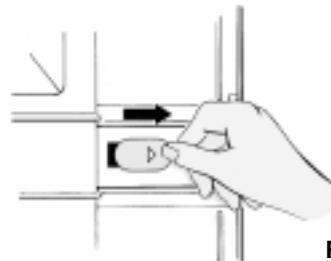


Fig. 3

## TROUBLE-SHOOTING GUIDE

### Machine vibrates during spin cycle:

Check the following:

- Is the machine perfectly horizontal with all four feet on ground? (see "Installation Instructions").
- Have the transit bolts been removed? The transit bolts must be removed before the machine is used (see "Installation Instructions").

### The machine does not spin at the end of the programme:

- The machine is fitted with an imbalance detection and correction system. If the wash consists of a single heavy/large size article (bathrobe, bath mats, etc.) the system can automatically reduce the spin speed to protect the machine or even stop the spin cycle altogether, if the imbalance is too great even after several restarts.
- If the load is too wet at the end of the programme, add further garments and run a new spin cycle.

### Detergent and additive product residues in detergent drawer at end of wash:

Check the following:

- Is the siphon installed correctly and not clogged (see "Care and Maintenance", "Detergent Drawer")?
- Also check:
- Is not enough water delivered? The mesh filter in the water hose could be clogged (see "Care and Maintenance", "Water Hose Mesh Filter").

## AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. Try to remedy the problem (see "Trouble-Shooting Guide").
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call After-Sales Service.  
Specify:
  - The nature of the problem.
  - The exact model of the appliance.
  - The service code (number after the word SERVICE).



**The After-Sales Service sticker is on the inside of the door.**

**SERVICE** 0000 000 00000



- Your full address.
- Your telephone number and area code.
- The After-Sales Service telephone number and address can be found in the warranty or on application to the retailer.

## TROUBLE-SHOOTING GUIDE

The appliance is equipped with automatic safety functions able to quickly identify and indicate the presence of faults and react appropriately. Most faults are minor problems that can be solved quickly.

### **The appliance will not start:**

Check the following:

- Is the power plug properly inserted in the mains socket?
- Is the socket working properly (use a table lamp)?
- Is the door closed (child safety device)?
- Is a programme selected?
- Has the Start button been held down for about 1 second?

### **The appliance stops during the programme:**

- **Has the programme selection been changed?**
  - If yes, hold down the Start button for about 1 second to continue with the new programme selection.
  - If the programme was changed by accident (for instance by a child):  
Reselect the desired programme and hold down the Start button for about 1 second. The programme will continue.

- **No water or insufficient water:**

- Set the programme selector to "0".

Check the following:

- Is the tap turned on completely and the mains water supply working (check the water pressure)?
- Is there a kink in the water hose?
- Is the water hose filter clogged (see "Care and Maintenance" "Water Hose Mesh Filter")?
- Is the water in the water inlet hose frozen?

Reselect the desired programme and hold down the Start button again for about 1 second (do not add detergent).

The programme will continue.

- **Waste water not pumped out:**

- Set the programme selector to "0".  
Check the following:
- Is the drain hose installed without kinks (see "Installation Instructions").
- Is the pump blocked or filter clogged (see "Removing The Filter" / "Draining Residual Water").  
**IMPORTANT:** Before draining, make sure that the water has cooled.
- Is the water in the drain hose frozen?
- Is the rinse hold button pressed?

Reselect the desired programme and hold down the Start button again for about 1 second (do not add detergent).

The programme will continue.

If the fault occurs again, contact After-Sales Service (see "After-Sales Service").

- **The Water Stop indicator is on (depends on model):**

- Close the tap(s) and pull the power plug out of the socket.
- The Water Stop system can be activated by:
  - a) excessive foam
  - b) a leak in the water supply hose or the machine.
- Tip the machine forwards and allow the water to drain out.  
Then:
- Open the tap(s). (If the machine immediately fills with water before the machine is reconnected to the power supply, the machine is malfunctioning. Close the tap(s) and call After-Sales Service.)
- Insert the power plug in the socket. The programme will continue.  
If the fault occurs again, contact After-Sales Service (see "After-Sales Service").




## CARE AND MAINTENANCE

### APPLIANCE EXTERIOR AND CONTROL PANEL

- Clean using normal household detergent (do not use abrasive products).
- Dry with a soft cloth.

### DETERGENT DRAWER

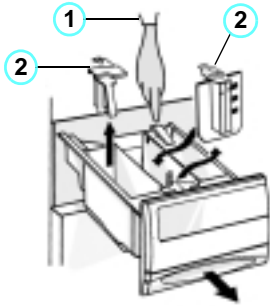

1. Disengage the drawer by pressing down the release lever and extract it.
2. Remove the inserts (the siphon from the softener compartment, the siphon from the chlorine bleach compartment and the coloured insert for liquid detergent).
3. Wash all the parts under running water.
4. Reposition the inserts, make sure to push the siphons in until they lock and refit the drawer.


### DOOR SEAL

- Clean with a damp cloth when necessary.
- Check the seal folds for foreign parts periodically.

### WATER HOSE MESH FILTER

- Check and clean periodically.

**For machines with a straight water supply hose (see figure):**

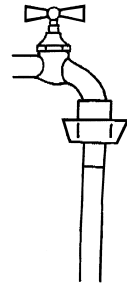

Straight water supply hose

1. Turn off the tap(s).
2. Unscrew the hose(s) from the tap(s).
3. Remove the mesh filter and clean it.
4. Refit the filter and screw the hose connection to the tap.
5. Unscrew the hose(s) from the machine.
6. Remove the filter from the washing machine with pliers and clean it.
7. Replace the filter and screw the hose connection back on to the machine.
8. **Turn on the tap(s) and ensure that the connections are completely water-tight.**

**For machines with Water Stop hose (see figure):**



Water Stop Hose

1. Turn off the tap.
2. Unscrew the Water Stop hose from the tap.
3. Remove only the loose filter and clean it.
4. Refit the filter and screw the Water Stop hose to the tap.
5. **Turn on the tap and ensure that the connection is completely water-tight.**

### FILTER

- Check and clean the filter at least 2 or 3 times a year (see "Removing The Filter").

## CHILD SAFETY DEVICE

To prevent improper use of the machine, turn the plastic screw on the inside of the appliance door with the thick, rounded edge of the coloured insert from the detergent drawer or using a coin.

1. Vertical slot - safety position: door cannot lock into place.
2. Horizontal slot - normal position: door can be closed as before.



## REMOVING THE FILTER / DRAINING RESIDUAL WATER



### WHEN TO REMOVE THE FILTER

- Check and clean the filter at least 2 or 3 times a year.
- When the appliance does not drain or spin properly.
- When the pump is blocked by an object (buttons, coins, safety pins).

**IMPORTANT:** Before draining, make sure that the water has cooled.

### REMOVING THE FILTER

1. Switch off the appliance (set the programme selector to "0").
2. Open the filter cover using the coloured insert from the detergent drawer.
3. Place a tub or container beneath it.
4. Slowly turn the filter anticlockwise until its handle is vertical without unscrewing it completely.
5. Wait until all the water has drained.
6. Now unscrew the filter completely and remove it.
7. Remove any foreign material from the filter.
8. Check that the pump rotor moves freely.
9. Insert the filter and screw it in clockwise until it locks (until the grip is horizontal).
10. Close the cover.
11. Pour 1/2 litre of water into the detergent drawer to reactivate the Eco system.
12. Select the desired programme and hold down the Start button for about 1 second.

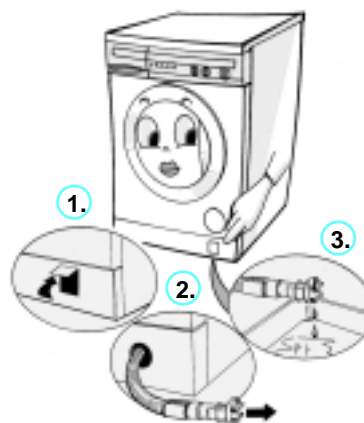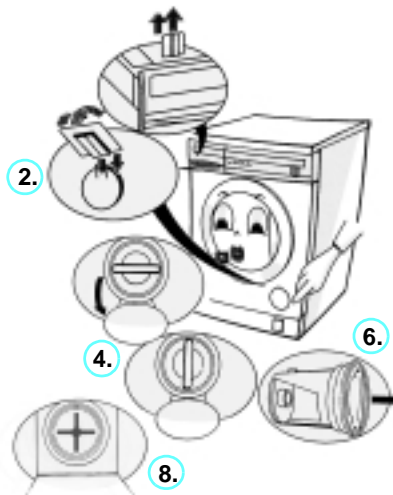

### WHEN TO DRAIN RESIDUAL WATER

- When transporting (moving) the machine.
- If there is danger of freezing in the installation room. In this case the machine should be drained after every wash.

### DRAINING RESIDUAL WATER

The residual water drain hose (if provided) is located in the machine plinth. If the machine is not provided with a drain hose in the plinth, remove the filter to drain residual water (see "Removing The Filter").

1. Lift the cover upwards with light pressure.
2. Pull out the hose by about 15 cm. Pull off its endcap.

3. Let the water drain into a flat container until the flow stops. Close the drain hose and replace it.
4. On next use, pour about 1 litre of water into the detergent drawer to reactivate the Eco system.

## PROGRAMME SEQUENCE INDICATOR

Indicates the programme selected and the current step in the sequence.

**Green zone:** Main wash.

**Black stripes:** Rinse.

**Solid black zone:** Final spin.

**"Stop":** Programme end.

## DOOR LOCK / PROGRAMME END

### DOOR LOCK

The door locks automatically after the programme start until the end of the programme.

**IMPORTANT:** During the first 15 minutes of the Cotton and Synthetic programmes (without Prewash) you can open the door to add items to the wash. This is not possible when the special option "Quick Wash / Rapid" is selected.

If the programme selector is set to "0" or the electrical supply is interrupted, the door lock will open after approximately 2 minutes.

### PROGRAMME END

1. The programme sequence indicator is at "Stop". Only attempt to open the door after this.
2. Set the programme selector to "0". The indicator light turns off.
3. Cancel the special options by pressing the appropriate buttons.
4. Open the door and unload the machine.
5. Turn off the tap(s).

**Note:** Do not fully close the door but leave it ajar to allow the drum to dry out.

## PROGRAMME RESELECTION / INTERRUPTING THE PROGRAMME

### PROGRAMME RESELECTION

#### a. CONTINUING WITH A NEW PROGRAMME OR TEMPERATURE SETTING

1. Select the new programme or temperature.
2. Hold down the Start button for about 1 second.  
The new programme will continue from the same programme step at which the previous programme was interrupted.

#### b. CANCELLING THE CURRENT PROGRAMME AND RESTARTING WITH A DIFFERENT ONE

There's no need to add more detergent when you start the new programme, since almost no water is drained out when a programme is cancelled.

1. Hold down the Start button for about 5 seconds or until the programme control audibly restarts.
2. Wait until the programme sequence indicator reaches "Stop".
3. Set the programme selector to "0".
4. Set the programme selector to the new programme, selecting the new temperature and any special functions required.
5. Hold down the Start button for about 1 second.


### TO INTERRUPT / PAUSE A PROGRAMME

To interrupt a programme that is already running and then restart it later:

1. Set the programme selector to "0".
2. After the desired break, reselect the programme.
3. Hold down the Start button for about 1 second.  
The programme will continue from where it was interrupted.

### TO STOP A PROGRAMME BEFORE THE END / DRAINING

To stop the programme before it has finished and drain the water:

1. Set the programme selector to "B" (Gentle spin).
2. Set the Spin Speed selector to  (No spin).
3. Hold down the Start button for about 1 second.  
The machine drains.  
Only open the door when the programme sequence indicator has reached "Stop".

## SELECTING SPECIAL OPTIONS

(Depending on model, see also the separate programme chart).

### Prewash button

- Only select for washing heavily soiled laundry (sand and grainy dirt).
- The prewash cycle adds 15 minutes to the programme time.

### Rinse hold button

- The laundry remains in the last rinse water without being spun, to avoid heavy creasing and prevent colours from dranging.
- Especially suitable for the "Synthetic" or "Delicate" programmes, if the laundry is not to be unloaded immediately after the end of the programme.
- Stopping Rinse Hold :  
Press the Rinse Hold button again; the load will be spun automatically according to the selected programme.

### Intensive Rinse button

- Increases the rinsing time and water quantity, for an even more thorough rinse.
- The intensive rinse function is especially suitable for areas with particularly soft water, for baby clothes and to help people with allergies.

### Quick Wash / Rapid button /

- Select for quick, economical washes.
- Especially suitable for small, lightly soiled loads.

### Lightly soiled (Half load)

- Reduces water consumption, above all during the rinse.
- Especially suitable for lightly soiled or small loads (reduce the detergent quantity).

### Energy save / Eco button


- Increases the washing time and reduces the temperature. This reduces energy consumption by about 30% without compromising the excellent results of the wash.

## SELECTING THE PROGRAMME / PROGRAMME START


### SELECTING THE PROGRAMME

(See also the separate programme chart and consumption data)

1. Open the tap(s).
2. Turn the programme selector knob to the desired programme. The Pilot lamp will light up to show that the machine is operating **1.**
3. Set the temperature knob to the desired temperature **2.**
4. Turn the spin speed selector to the desired speed **3.**

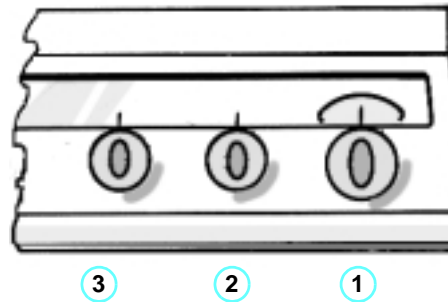

#### Note:

1. When "No Spin"  is selected :
  - The "Wool" and "Delicates" programmes do not run any spin cycle.
  - The "Cotton" and "Synthetic" programmes run a reduced speed spin cycle between rinses to ensure effective rinsing.  
At the end of the programme a short spin is run.
2. Each programme has a predetermined automatic maximum spin speed as follows:

Programme	MAX. SPIN SPEED in rpm (depending on model)					
	1200	1100	1000	900	800	600
Cotton	1200	1100	1000	900	800	600
Synthetic	900*	900*	900*	900	800	600
Delicates	900*	900*	900*	900	800	600
Wool	900*	900*	900*	900	800	600
Rinse + spin	1200	1100	1000	900	800	600
Gentle spin	900*	900*	900*	900	800	600

\* For improved garment care, the real spin speed is here reduced to 900 rpm.

5. Select special options as desired (see the next section).
6. Hold down the Start button for about 1 second.

## DETERGENT AND ADDITIVES

### FILLING THE DETERGENT AND ADDITIVES

The drawer will have three or four chambers depending on the appliance model.

1. Pull out the detergent drawer.

2. Filling the detergent:

- Programmes with pre- and main wash. \U/ \U/

- Main wash programmes without prewash. \U/

When using liquid detergent, extract the coloured insert from the drawer and put it in the compartment \U/.

The insert has a scale to make dosing easier.

- Add fabric softeners and conditioners - no further than the "Max" mark (three chamber models) or the "100 ml" mark (four chamber models). \S/

- Fill chlorine bleach only to the "Max" mark (if model is suited to its use). \C/

- Stain remover. \U/

- Water softener (water hardness class 4). \U/

- Starching.


Dissolve / dilute the starch, powder or liquid, in approximately 1 litre of water in a container. Load the machine, close the door, select "Rinse and Spin" and start.

Once the machine has started filling, pour the dissolved starch into detergent dispenser chamber \U/. Flush the chamber straight away by adding about half a liter of water. \U/


3. Slide the drawer in until it clicks shut.

#### Note:

- When using highly concentrated detergents, use the special detergent ball provided with the detergent and place it directly in the drum to avoid dispensing problems (for programmes without prewash only).
- For programmes with prewash: liquid detergents can be used for the prewash. For the main wash a powder detergent has to be used.
- Dose the correct amount of concentrated fabric softener and dilute with water up to the "Max" mark (three chamber models) or the "100 ml" mark (four chamber models) in the softener compartment.

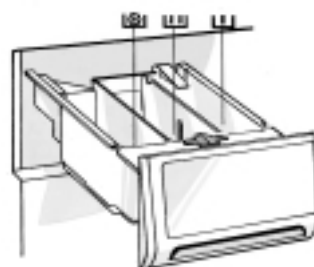

Detergent drawer with 3 chambers

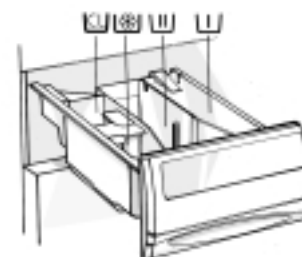

Detergent drawer with 4 chambers

## DYEING AND BLEACHING

**Dyeing:** Commercially available products usually consist of a dye colour, fixing agent and salt. Pour the dye colour, fixing agent and salt directly into the empty drum, and only then load the laundry.

- Only use products designed for use in automatic washing machines.
- Follow the manufacturer's instructions.
- Plastic and rubber components of the machine can be stained by dyes or bleaches.

## DETERGENT AND ADDITIVES

### CHOOSING THE RIGHT DETERGENT

The type of detergent depends on:

- the type of fabric (cottons, synthetics, delicates, wool, silk);

**Note:** Use only specific detergents for washing wool and silk articles;

- colour;
- wash temperature;
- degree and type of soiling.

**Note:**

- Whitish residues on dark fabrics are due to the insoluble water softeners in modern phosphate-free detergents. If this occurs, shake or brush out the fabric or use liquid detergents.
- Keep detergents and additives in a safe, dry place out of the reach of children.
- Use only detergent and fabric conditioner specifically produced for automatic domestic washing machines.
- When using water softeners, descaling agents and dyes, make sure that they are suitable for use in domestic washing machines.
- Do not use solvents in the machine (e.g. turpentine, benzene, etc.). Do not wash fabrics in the machine which have been treated with solvents or flammable liquids.

### DETERGENT DOSAGES

Do not exceed manufacturers' recommended dosages as shown on the detergent package.

The amounts depend on:

- **degree and type of soiling;**
- **size of wash;**
  - full load: according to manufacturers' instructions;
  - half load: 3/4 of the normal amount;
  - minimum load (about 1 kg): 1/2 the amount used for full load;
- **water hardness in your area** (request information from the water company): soft water requires less detergent than hard water.

**Note:**

- Overdosing the detergent results in excessive foaming and reduces the wash efficiency. If the washing machine detects too much foam, it may prevent spinning.
- Using insufficient detergent results in grey laundry. The heating elements and drum also build up scale.
- If using chlorine bleach, follow the bleach instructions carefully. Overdosing the bleach can damage the wash.


 
### WATER HARDNESS


WATER HARDNESS CATEGORY	CHARACTERISTICS	GERMAN °DH	FRENCH °FH	ENGLISH °EH
1	soft	0-7	0-12	0-9
2	medium	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26

If the machine has a three chamber detergent drawer set the hardness pointer to the domestic water hardness level. Move the hardness pointer sideways to the desired position.

## SORTING THE WASH

### 1. Sort the load according to:

- **Fabric type / care label symbol**  
Cotton, mixed fibres, synthetics, wool, silk, viscose.
  - **Colours**  
Separate coloured and white articles.  
Wash new coloured articles separately.
  - **Article size**  
Washing articles of different sizes together improves wash efficiency and distributes the load better in the drum.
  - **Fabric delicacy**  
Wash delicates separately.  
Select the appropriate special programme for machine-washable wool  curtains or silk  and other delicate fabrics. Either remove curtain hooks or tie into a cloth bag. Only wash machine-washable fabrics. Wash small articles (e.g. nylon stockings, belts etc.) and articles with hooks (e.g. bras) in a cloth bag or pillow case with zip.
- 2. Empty all pockets**  
Coins, safety pins etc. can damage the laundry, drum and tub.
- 3. Closures**  
Close zips and hooks and eyes. Loose belts or ribbons should be tied together.

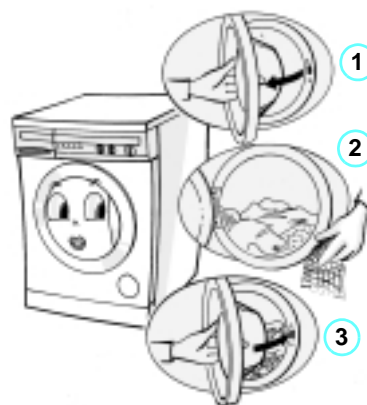

### WASHING AND CARING FOR SILK ARTICLES

 
 
**Washing:** To ensure correct care of silk articles

1. Check the care instructions on the label and make sure that the article is machine-washable (30°C).
  2. Wash articles of the same colour preferably together.
- Note:** Check that new articles are colour fast and wash them separately the first time.
3. Use only special detergent for silk or wool.
  4. This programme has no spin cycle.
  5. If you select the "Rinse Hold" function, do not leave the wash in the rinse water for too long.

#### Drying and ironing

- Open the garment out on a towel and squeeze the water out without wringing.
- Never dry silk garments in the sun.
- Iron from the reverse side when the fabric is still slightly damp.
- To avoid water marks, don't spray on water and don't use a steam iron.

### STAIN REMOVAL

- Blood, milk, egg, and other organic substances are generally removed by the enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains, etc. add a biological stain removing agent to the main wash in compartment  or a chlorine bleach in compartment  of the detergent drawer (if fitted).
- Particularly stubborn stains can be treated with stain remover before the wash.

### LOADING THE WASH

1. Open the door.
2. Load the articles one at a time, loosely into the drum, without overfilling.
3. Close the door.

### LOAD CAPACITY

See the separate programme chart.

**Note:** Overloading the machine reduces the wash efficiency and encourages creasing.



## PROTECTING THE ENVIRONMENT

- **Packing**  
The packaging is marked with the recycling symbol ♻, signifying that it can be 100% recycled.
- **Appliance**  
The appliance is made of recyclable materials. Dispose of the appliance in conformity with environmental regulations. Make it inoperable, pull out the plug and cut off the power cable so that the appliance cannot be connected to the mains.
- **Eco-tips**
  - A full load (depending on the programme selected) gives the best energy and water consumption.
  - Laundry which is lightly to moderately soiled does not require a prewash.
  - Lightly soiled laundry should be washed at a low temperature or with a short programme.
  - When washing small loads press the "Lightly Soiled / Half Load"  $\frac{1}{2}$  button (if present) and use less detergent.
  - If you wish to dry the laundry in a household dryer, use the highest spin speed (depending on the programme).  
The dryer will then consume less energy.
  - Do not exceed the recommended dosages on the detergent packet.
  - Only use stain remover or bleach if absolutely necessary.


## SAFETY INSTRUCTIONS

- The appliance must only be used in the household for the prescribed uses.
- All connections to the water and electrical mains must be made in accordance with the manufacturer's instructions and following local utility company safety regulations (see Installation Instructions).
- Before any cleaning and maintenance switch off the machine or disconnect it from the mains.
- Switch off the washing machine and turn off the tap(s) whenever the machine is not in use.
- Never use excessive force to open the door.
- Children must not be allowed to play with or inside the machine.  
Do not rest any weight on the door.
- Packaging materials can be dangerous for children. Keep the packaging material (plastic bags, polystyrene, etc.) well out of their reach.
- The appliance conforms to European safety regulations, EC directive n. 93/68/EWG and EN 60555.

## MOVING AND TRANSPORTING THE APPLIANCE

1. Pull out the mains plug.
2. Shut off the water tap(s).
3. Disconnect the inlet and drain hoses.
4. Drain residual water from the appliance and hoses (see "Removing The Filter" / "Draining Residual Water").
5. Fit the transit bolts (see "Installation Instructions").

## APPLIANCE AND ACCESSORIES

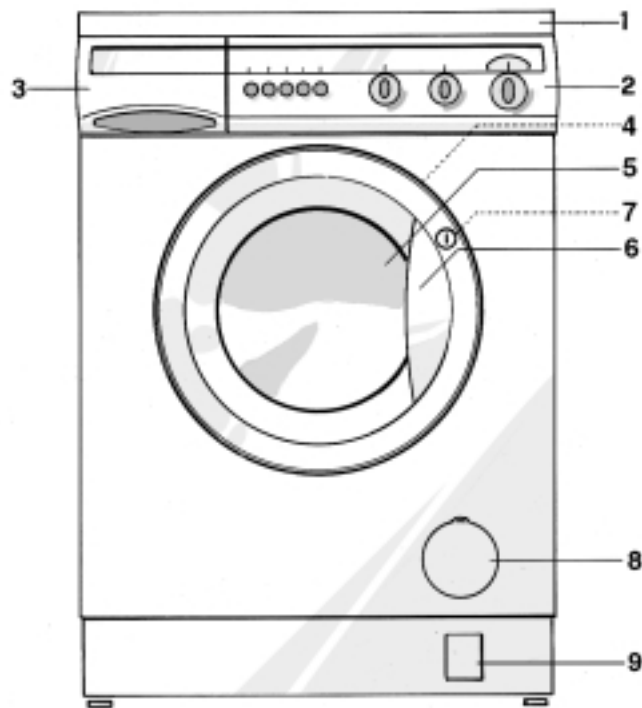


1. Worktop
2. Control panel
3. Detergent drawer
4. After-Sales Service sticker (inside door)
5. Door
6. Door handle
  - To open: press the button on the inside of the handle and pull
  - To lock: press the door firmly (the lock will click into place)
7. Door lock child safety device (inside door)
8. Filter (behind hatch)
9. Residual water drain (depending on model).

<b>GB</b>	<b>CONTENTS</b>
<b>APPLIANCE AND ACCESSORIES</b>	<b>PAGE 5</b>
<b>PROTECTING THE ENVIRONMENT</b>	<b>PAGE 6</b>
<b>SAFETY INSTRUCTIONS</b>	<b>PAGE 6</b>
<b>MOVING AND TRANSPORTING THE APPLIANCE</b>	<b>PAGE 6</b>
<b>SORTING THE WASH</b>	<b>PAGE 7</b>
<b>DETERGENT AND ADDITIVES</b>	<b>PAGE 8</b>
<b>DYEING AND BLEACHING</b>	<b>PAGE 9</b>
<b>SELECTING THE PROGRAMME / PROGRAMME START</b>	<b>PAGE 10</b>
<b>SELECTING SPECIAL OPTIONS</b>	<b>PAGE 11</b>
<b>PROGRAMME SEQUENCE INDICATOR</b>	<b>PAGE 12</b>
<b>DOOR LOCK / PROGRAMME END</b>	<b>PAGE 12</b>
<b>PROGRAMME RESELECTION / INTERRUPTING THE PROGRAMME</b>	<b>PAGE 12</b>
<b>REMOVING THE FILTER / DRAINING RESIDUAL WATER</b>	<b>PAGE 13</b>
<b>CARE AND MAINTENANCE</b>	<b>PAGE 14</b>
<b>CHILD SAFETY DEVICE</b>	<b>PAGE 14</b>
<b>TROUBLE-SHOOTING GUIDE</b>	<b>PAGE 15</b>
<b>AFTER-SALES SERVICE</b>	<b>PAGE 16</b>
<b>INSTALLATION INSTRUCTIONS</b>	<b>PAGE 17</b>



**BEFORE USING THE APPLIANCE FOR THE FIRST TIME:**

- **IMPORTANT: MAKE SURE YOU HAVE READ THE “INSTALLATION INSTRUCTIONS”**
- **REMOVE THE TRANSIT BOLTS BEFORE USING THE MACHINE FOR THE FIRST TIME**
- **First wash cycle without laundry:**
  1. Open the tap(s).
  2. Close the door.
  3. Pour a little detergent (about 100 ml) into the detergent compartment .
  4. Select a short wash programme (see programme chart).
  5. The ON light will light up to show that the appliance is operating.
  6. Hold down the Start button for about one second.  
This will remove any water remaining in the machine from the manufacturer's test run.

**ROUTINE WASHES:**

1. Open the tap(s).
2. Sort the laundry according to fabric type and colour and load the machine.
3. Close the door.
4. Add detergent and any additives required.
5. Select the programme, temperature, spin speed and special options.
6. Hold down the Start button for about one second.

**IMPORTANT:**

During the first 15 minutes of the Cotton and Synthetic programmes (without Prewash) you can open the door to add items to the wash.  
This is not possible when the special option “Quick Wash” is selected.